

# ● AHD TVI CVI CVBS 5MP MVT-AH11S



## ● FEATURES

- \* 5.0MP 1 / 2.5"0521 CMOS
- \* Fuhun FH8538M
- \* 5.0mp
- \* 4 1 AHD TVI CVI CVBS
- \* AE AWB AES AGC
- \* ICR
- \* 75-3 500M
- \* OSD
- \* UTC UTC DVR OSD

●  
 ●



## ● SPECS

●	MVT-AH11S
●●	1 / 2.5" CMOS 0521 + 8538M 5.0MP
●	PAL / NTCS
●●●	AHD / CVI / TVI / 960H
●	6 M12
●●●	36 30
●●●	0.05LUX / F1.2 B / W 0.01LUX / F1.2
●●●	1/25 30 S 1 / 50,000S
●	●
●●●fps	5MP @ 25fps
●	62
●●●	BLC
OSD	●●
AWB	●●/●●/●●
●	IR Cut Auto ICR / Color / B / W
●●●	75-3 500
●	DC 12V ± 10
●●●	-30°C + 60°C / 95% RH
●	IP66
●	2
●	4W MAX

# Waterproof 5MP AHD Camera

[www.mvteamcctv.com](http://www.mvteamcctv.com)



# M TEAM

## ● FAQs

M TEAM

Q1: How to connect the camera to the DVR?

A: Connect the camera to the DVR by using the AHD cable.

Q2: How to connect the camera to the PC?

A: Connect the camera to the PC by using the AHD cable and the AHD to PC adapter.

Q3: Can I use the camera for OEM?

A: Yes, we can provide OEM service.

Q4: What is the power supply of the camera?

A: The camera is powered by 12V DC.




**AMPERAGE**

\* Power supply's amperage cannot be less than CCTV camera's amperage.



**VOTAGE DROP**

\* Power supply's wire will make voltage drop, so make sure not too long wire, and long wire with a thicker gauge. (Thicker gauge makes voltage drop more slowly).

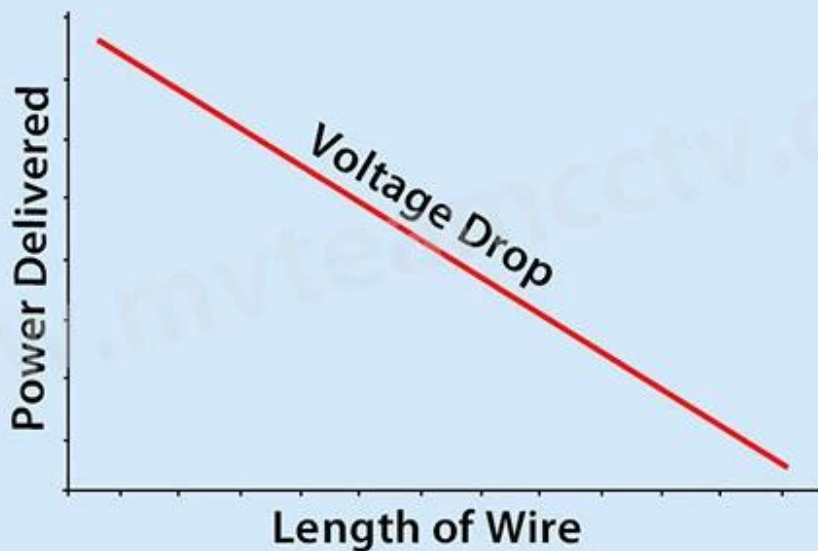

**Voltage Drop(%)**



□□□□□□□□□□□□□□□□

□□□□ □□□□□□ [www.mvteamcctv.com](http://www.mvteamcctv.com) □□□□□□□□□□□□□□□□ CCTV□□□□