

Password recovery

(1) password recovery of GM

① One way ,you can use tool

Software version: above 8.50

② The other way,you can follow these steps

In preview,don't do any operate or enter any interface,first press ESC button and hold more than 5 seconds, loosen the button,then press STOP (■) button keeping more than 5 seconds,the two operation must within 3 seconds,when hearing a beep means the password has been restored to factory settings,initial user is admin,initial password is blank.

(2) password recovery of HS

① One way ,you can use tool

Software version: above 1.0.1.19

② The other way,you can follow these steps

In preview,don't do any operate or enter any interface,first press SLOW(⏮) button and hold more than 5 seconds, loosen the button,then press FAST (⏭) button keeping more than 5 seconds,the two operation must within 3 seconds,when hearing a beep means the password has been restored to factory settings,initial user is admin,initial password is blank.